



MACINTOSH INSTALLATION INSTRUCTIONS FOR
MacWireless AirPort Mini Booster
For PowerMac G5 with External Antenna Port

Table of Contents

| | |
|------------------------|----------|
| Introduction | 1 |
| Installation | 1 |
| Troubleshooting | 1 |



Introduction

Thank you for purchasing a MacWireless antenna. Before installing your antenna, we recommend that you test your current signal level using iStumbler. Compare this result to the signal level after installation to see how much your connection has improved. iStumbler is included on the MacWireless CD in the "Extra Software" directory, and is also available for download at: <http://www.istumbler.net/>

Installation

1. Power off your computer.
2. Remove the antenna from your G5 if there is one currently installed.
3. Attach the white cable adapter to the gold SMA extension cable. This will convert the cable to the proper connector type for your G5.
4. Connect the extension cable and adapter to your computer.
5. Connect the MacWireless AirPort Mini Booster to the cable adapter.
6. Mount the Mini Booster on the back of the display using the provided mount.
7. Included with the Mini Booster are two power adapter options; one for standard AC outlets, and one for USB ports. Choose a power adapter and connect it to the Mini Booster.
8. Connect the power adapter to either an available USB port, or an available AC outlet, as appropriate.
9. Power on your base station and position the antenna for optimal performance.

Troubleshooting

I'm not seeing a significant increase in range. What can I do?

1. Verify the physical connections, and make sure that you power-cycle your wireless device after connecting or disconnecting range extending hardware.
2. Aim your antenna appropriately. For more information on how your antenna radiates energy, see the antenna help section of our website: <http://www.macwireless.com/html/help/antenna.html> If you have an antenna from a manufacturer other than MacWireless, consult your product documentation for more information.

The activity LED on the booster is not lit. Is my booster working?

The booster's activity LED will only light up when network traffic is present. A flickering or occasional LED is normal you are certain that network traffic is present, and the LED still does not light, make sure that the booster is properly connected and then restart your computer.

Factors Affecting Range and Performance of All Wireless LAN Systems

Range estimates are typical and require line of sight. Basically that means you will need a clear unobstructed view of the antenna from the remote point in the link. Keep in mind that walls and obstacles will limit your operating range and could even prevent you from establishing a link. Signals generally will not penetrate metal or concrete walls. Trees and leaves are obstructions to 802.11 frequencies so they will partially or entirely block the signal. Other factors that will reduce range and affect coverage area include metal studs in walls, concrete fiberboard walls, aluminum siding, foil-backed insulation in the walls or under the siding, pipes and electrical wiring, furniture, and sources of interference. The primary source of interference in the home will be the microwave oven. Other sources include other wireless equipment, cordless phones, radio transmitters, and other electrical equipment. Due to the increased gain, installing range extender antennas in the presence of interference could actually yield equal or worse range. These solutions work for the vast majority of our customers. However, due to the numerous factors affecting range and performance, we do not guarantee that you will achieve any specific improvement in range for your specific application.

Disclaimer: Although this product has been tested and verified, MacWireless does not accept responsibility for loss or damage to any equipment or device. Use at your own risk.