



MACINTOSH INSTALLATION INSTRUCTIONS FOR
MacWireless Power over Ethernet
For AirPort Snow or Graphite Base Stations

Table of Contents	
Introduction	1
Installation	1




Introduction

Thank you for purchasing MacWireless Power over Ethernet kit. The Power over Ethernet (PoE) kit contains two parts, an injector and a splitter. The two devices look very similar, but examining them closely will reveal the difference. The injector unit has an ethernet connector and a female power jack. The splitter has an ethernet connector and a male power plug. There is a diagram below showing a correctly assembled system.

Installation

1. Connect the power connector of the splitter to your AirPort Base Station. Please note that it is not possible to connect the injector to the base station. Only the splitter will fit into the power port.
2. Connect the Ethernet cable on the splitter to your AirPort Base Station.
3. Connect the injector's power connector to the your AirPort Base Station's power supply cable.
4. Plug the AirPort Base Station's power supply cable into a wall outlet.
5. Connect the Ethernet cable on the injector into a device on your network, such as an Ethernet switch or router.
6. Using an Ethernet cable of appropriate length for your situation, connect the injector to the splitter. The maximum length for this cable is 250 feet for Snow base stations, and 150 feet for Graphite base stations.
7. Installation is complete! You can verify your installation by comparing your setup to the image below.

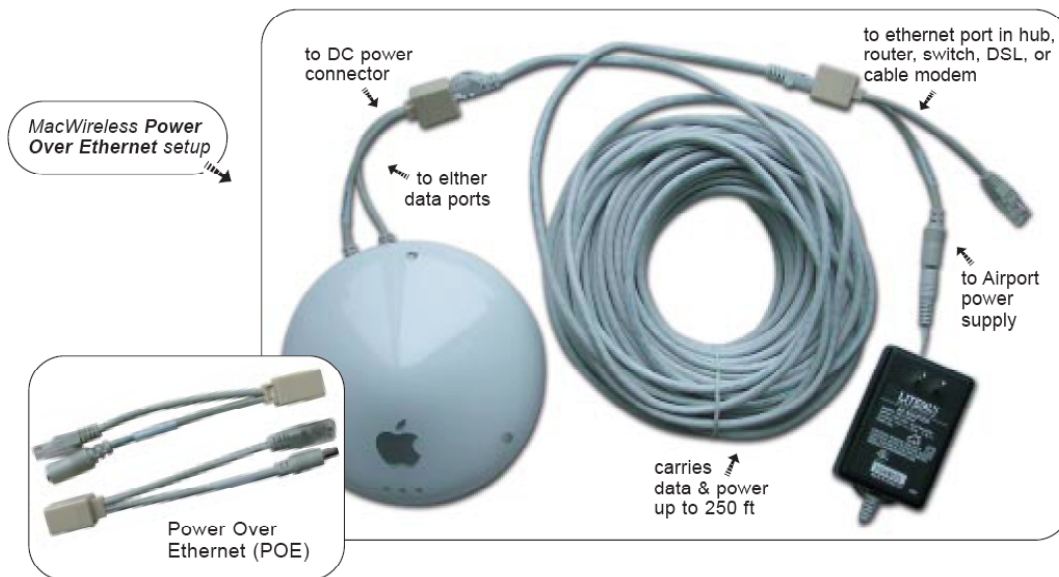

Disclaimer: Although this product has been tested and verified, MacWireless.com does not accept responsibility for loss or damage to any equipment or device. Use at your own risk.