



MACINTOSH INSTALLATION INSTRUCTIONS FOR
MacWireless Power over Ethernet
for 11g AirPort Extreme Base Stations with PoE Support


Table of Contents	
Introduction	1
Installation	1
Installation Diagram	2



Introduction

The Power over Ethernet (PoE) Injector kit contains three parts: an injector, a black AC cable, and a black power brick. Follow the instructions below to set up your PoE kit. There is a diagram on the back of this sheet showing a correctly assembled system.

Installation

1. Find the three pronged black AC cable provided in the kit. Plug one end of the cable into the black power brick and the other end into a standard AC wall outlet.
2. On the black power brick there is also a thin black cable with a connector on the end of it. Plug this connector into the "POWER IN" port on the PoE injector. A green LED should light up on the injector.
3. Plug an Ethernet cable (not provided) into an available Ethernet port on your router or switch. Plug the other end of this cable into the "DATA IN" port on the PoE injector. **Warning:** Please be sure to connect this cable to the "DATA IN" port on the injector. Plugging this cable into the "P+DATA OUT" port on the injector may cause damage to your equipment.
4. Plug another Ethernet cable (not provided) into the WAN port on the AirPort base station. The WAN port is designated by the following symbol: . Plug the other end of this cable into the "P+DATA OUT" port on the injector. Maximum length for this Ethernet cable is 328 feet.
5. Installation is complete. Your base station should now be receiving both power and data.

Disclaimer: Although this product has been tested and verified, MacWireless does not accept responsibility for loss or damage to any equipment or device. Use at your own risk.

