



INSTALLATION INSTRUCTIONS FOR

MacWireless Outdoor Decoy Camera



Table of Contents

Introduction	1
Installation	1
Mounting	1

Introduction

Thank you for purchasing a MacWireless Outdoor Decoy Camera. Please see below for instructions on how to set up your camera.

Installation

1. Slide the metal cover in either direction to remove it from the top of the enclosure.
2. Remove the two screws in the back of the enclosure.
3. Remove the rear section from the enclosure.
4. On the bottom of the enclosure, remove the large screw closest to the back of the unit.
5. Reach inside the enclosure and slide the black battery compartment out the back of the unit. Take care not to pull the battery compartment out too far, as you may damage the wires connecting the battery compartment to the LED.
6. Open the battery compartment, insert two AA batteries, and close the battery compartment. The LED on the front of the camera will begin to flash at intervals of a few seconds.
7. Slide the battery compartment back into the enclosure.
8. Replace the large screw on the bottom of the enclosure. Please note that there is no hole in the bottom of the battery compartment. The screw simply presses against the battery tray, holding it in place.
9. Replace the rear section of the enclosure, and the two rear enclosure screws.
10. Slide the metal cover back into place on the top of the enclosure.
11. Installation is complete.

Mounting

1. Choose a mounting location for your camera.
2. Screw the mounting base into the wall using the provided screws.
3. At the top of the mounting stem is the mounting disk. It is attached to a plastic ball which is inside the top of the stem. Rotate the mounting disk to the right as far as it will go to expose the mounting bolt.
4. Opposite the mounting disk is a gray handle attached to the a bolt. Loosen the bolt by turning the handle to the left.
5. Lift the mounting disk to an upright position and tighten the gray handle.
6. Screw the mounting stem into the bottom of the camera enclosure until the mounting disk is firmly against the mounting plate.
7. Screw the mounting stem and enclosure into the base.
8. Adjust the angle of the camera by loosening the gray handle at the top of the stem.
9. Drill two holes in the wall and pass the two decoy cables through the holes.
10. The mounting process is complete.

Disclaimer: Although this product has been tested and verified, MacWireless does not accept responsibility for loss or damage to any equipment or device. Use at your own risk.